



PROTERRACE DRAIN FDP

VARNISHED/COATED ALUMINIUM

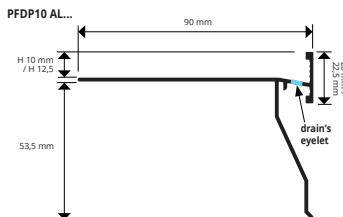


EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

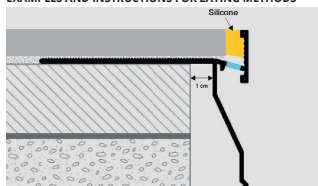

1. Choose PROTERRACE DRAIN FDP according to the tile thickness and desired colour. 2. Fix the external corners to the screed with nails taking care to separate them at least 1 cm from it. 3. Cut "PROTERRACE DRAIN FDP" to the desired length. Lay the profile and fix it with nails. Connect it with the corners using the junctions. 4. Apply the desired waterproofing system. 5. Lay the tiles, leaving about 5 mm between tiles and profile. 6. Seal the space between tiles and profile with PROBAND FIX.

PROTERRACE DRAIN FDP is an edging profile in varnished aluminium designed to protect the edges of the tiles laid on terraces and balconies and to allow a correct water discharge. The profile is equipped with a punched flange that ensures its fixing to the support. The flange is also provided with small holes that allow the momentary fixing of the profile with nails. The profile is also provided with holes that allow the discharge of the water filtered between the profile and tiles. The availability of special pieces such as external corners and junctions make **PROTERRACE DRAIN FDP** a much sought after and easy to lay profile.

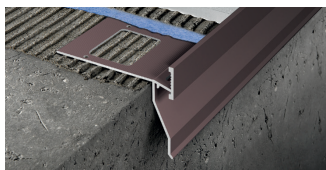

VARNISHED/COATED ALUMINIUM
bar length 2,7 lm - pack 5 Pcs - 13,5 lm

Article	H mm
PFDP 10AL...	10
PFDP 125AL...	12,5

Available in the colours: B-G-T-A (on demand E-BF-GF-TF-EF-C)
The code of the selected colour must be added to the article code.
E.g.: PFDP 10 AL... (white) PFDP 10 ALB.

COLOURS

B - White (9010)	G - Gray (7038)	T - Dark brown (8019)
------------------	-----------------	-----------------------

ON DEMAND

E - Beige (1019)

EMBOSSED COLOURS

A - Anthracite grey - (no RAL)

EMBOSSED ON DEMAND (price and delivery time to be agreed)

BF - White (9010)	GF - Gray (7038)	TF - Dark brown (8019)
EF - Beige (1019)	C - Corten	




EXTERNAL CORNERS - pack 10 Pcs

Article		
AEPFDP 10AL...		
AEPFDP 125AL...		

JOINTS - pack 1 Pcs upper + 1 Pcs lower

Article		
GINFDP 10AL .../1		
GINFDP 125AL .../1		

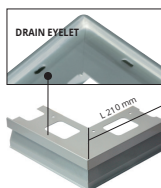


AEPFDP 10/125AL...

GINFDP 10/125AL .../1

PROSIDE WALK

VARNISHED/COATED ALUMINIUM

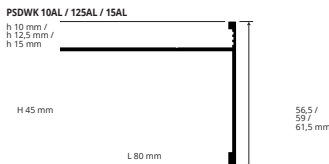

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose PROSIDE WALK according to the tile thickness and desired colour. 2. Waterproof with PROBAND 150 and PROBAND KOLL the front of the screed. 3. Fix the external corners with nails. 4. Cut PROSIDE WALK to the desired length and fix it with nails; connect it with the corners using the junction element. 5. Lay the tiles, leaving about 5 mm between tiles and profile. 6. Seal the space between tiles and profile with PROBAND FIX.



VARNISHED EMBOSSED ALUMINIUM

bar length 2,7 lm - pack 20 Pcs - 54 lm

Article	H mm	H mm	L
PSDWK 10AL...	10	45	80
PSDWK 125AL...	12,5	45	80
PSDWK 15AL...	15	45	80

EMBOSSED COLOURS

A - Anthracite grey	GF - Gray (7038)
---------------------	------------------

EMBOSSED ON DEMAND MINIMUM 270 LM by color and height

BF - White (9010)	TF - Dark brown (8019)	C - Corten
EF - Beige (1019)		

(price and delivery time to be agreed)

News 2017




EXTERNAL CORNERS - pack 10 Pcs

Article	h mm	H mm	L
AEPDWWK 10AL...	10	45	80
AEPDWWK 125AL...	12,5	45	80
AEPDWWK 15AL...	15	45	80

JOINTS - pack 10 Pcs

Article		
GINSDWK 10AL...		
GINSDWK 125AL...		
GINSDWK 15AL...		

AEPDWWK external corner (welded)



GINSDWK joint

