


STYLE STAIR

TOP + PIN INSERT + ALUMINIUM BASE
27 wood finishes and 6 anodised finishes

The **STYLE STAIR** range comprises a large assortment of aluminium step nosing profiles for the edges of steps in wood, parquet, laminate or melamine with thickness varying from 7 to 22 mm. Twenty-seven wood-effect finishes are available: light maple - dark maple - light beech - dark beech - light durmast - dark durmast - light cherry - dark cherry - walnut - wenge... plus six anodised finishes (3 available on demand). Select the most suitable profile for the thickness of the floor. There is a profile (top) and an insert (pin) for each height, while the base (punched or perforated) allows fixing by screwing or gluing.

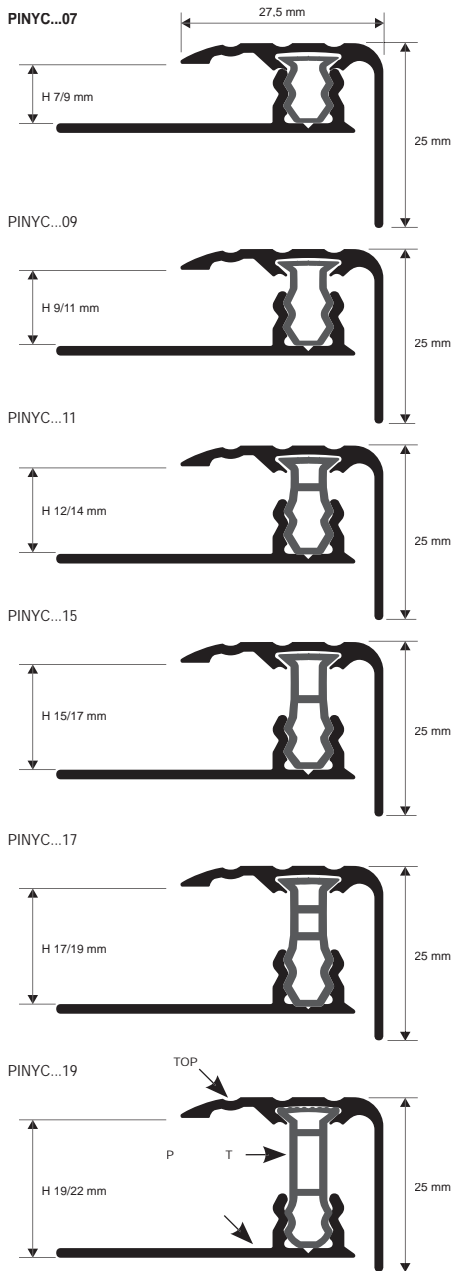

ALU. TOP + PIN INSERT + ALU. BASE 40 PUNCHED/PERFORED
(6 anod. al. finishes of which 3 on demand) - bar length 2,7 LM - pack. 20 Pcs - 54 LM

Article	H mm
PINYC... 07 (PIN insert 09)	7 / 9
PINYC... 09 (PIN insert 11)	9 / 11
PINYC... 11 (PIN insert 13)	12 / 14
PINYC... 15 (PIN insert 15)	15 / 17
PINYC... 17 (PIN insert 17)	17 / 19
PINYC... 19 (PIN insert 19)	19 / 22



ALU. TOP + PIN INSERT + ALU. BASE 40 PUNCHED/PERFORED
(27 wood finishes) - bar length 2,7 LM - pack. 20 Pcs - 54 LM


Article	H mm
PINYC... 07 (PIN insert 09)	7 / 9
PINYC... 09 (PIN insert 11)	9 / 11
PINYC... 11 (PIN insert 13)	12 / 14
PINYC... 15 (PIN insert 15)	15 / 17
PINYC... 17 (PIN insert 17)	17 / 19
PINYC... 19 (PIN insert 19)	19 / 22

COMPLETE

Available in the finishes: AO - AA - AB - 01W - 02W - 03W - 04W - 05W - 06W - 07W - 08W - 09W - 10W - 11W - 12W - 13W - 14W - 15W - 16W - 17W - 18W - 19W - 20W - 21W - 22W - 23W - 24W - 25W - 26W - 27W (AT, CH and SB available upon request with a minimum quantity order of 540 LM). The code of the selected colour must be added to the article code. E.g.: PINYC... 07 (chosen finish Anod. gold) PINYCAO 07.

COMPLETE

EXAMPLES OF LAYING

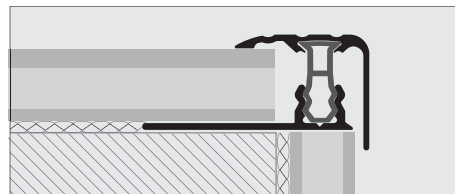

LAYING INSTRUCTIONS

wood floor, ensuring that approx. 3/10mm gap is left on one side to accommodate the natural expansion between the floor and the base. Choose the desired profile, if necessary cut TOP, PIN and BASE at the needed length and then insert the PIN in the TOP in the specific "dovetail" seat. The position the profile above the U-shaped snap-in seat of the base. With the aid of a board, hammer the TOP to the desired fitting level.

(for a precise assessment of colours and finishes, see the relative enclosed sheet)

