


PROCARPET ALL

NATURAL AND ANODIZED
SILVER ALUMINIUM

PROCARPET ALL is a profile in aluminium (natural or silver anodized) used for joining two floors of differing thickness and in particular for joining a tiled or parquet floor to wall-to-wall carpeting, making a perfect join thanks to the vertical part of less than 4 mm. In addition to completely protecting the edge of the higher floor, this particularly sturdy profile withstands high loads and supports the frequent passage of manual trolleys, vehicles and intense pedestrian traffic.

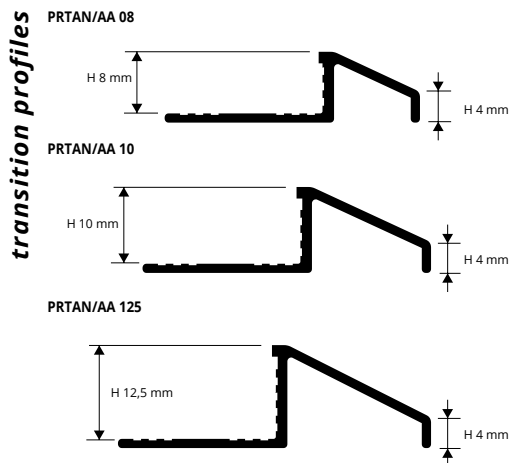


NATURAL ALUMINIUM thermo packed 5 Pcs
bar length 2,70 lm - pack. 20 Pcs - 54 lm

Article	H mm		
PRTAN 08	8		
PRTAN 10	10		
PRTAN 125	12,5		

ANODIZED SILVER ALUMINIUM thermo packed
bar length 2,70 lm - pack. 20 Pcs - 54 lm

Article	H mm		
PRTAA 08	8		
PRTAA 10	10		
PRTAA 125	12,5		

EXAMPLES OF LAYING

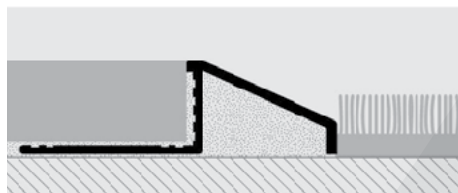

INSTRUCTIONS FOR LAYING

1. Choose the "PROCARPET ALL" taking into consideration the exact height of the floor. 2. Using a notched spreader apply the adhesive onto the area of application of the profile. 3. Lay and align the profile, cut to the necessary length, pressing the perforated flange into the adhesive. 4. Lay the tiles, aligning them so that the top edge of the profile is "flush" with the tile. 5. Fill the profile/tile area of contact with adhesive to prevent the accumulation of water in any voids.


COLOURS




PROSKID

POLISHED BRASS AND
ANODIZED SILVER ALUMINIUM

PROSKID is a sloping profile ideal for the stepless joining of two existing floors of differing heights where no transition profile was installed at the time of laying. Silicone is used for the laying. The notching on the profile helps anchorage of the silicone or adhesive. Hardwearing and attractive.

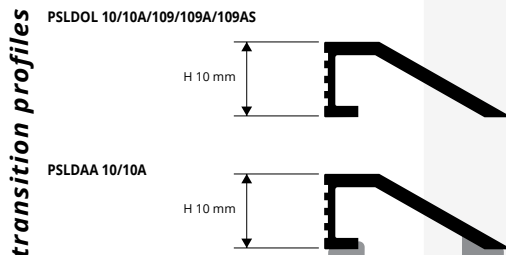

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

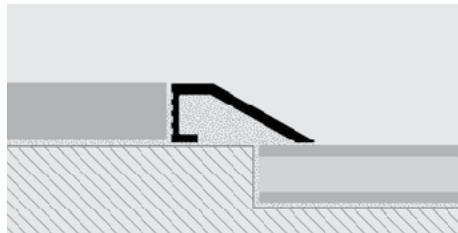

1. Choose the "PROCARPET" taking into consideration the exact height of the floor. 2. Using a notched spreader apply the adhesive onto the area of application of the profile. 3. Lay and align the profile, cut to the necessary length, pressing the perforated flange into the adhesive. 4. Lay the tiles, aligning them so that the top edge of the profile is "flush" with the tile. 5. Fill the profile/tile area of contact with adhesive to prevent the accumulation of water in any voids.

POLISHED BRASS thermo packed
bar length 2,70 lm - pack. 20 Pcs - 54 lm

Article	H mm		
PSLDOL 10	10		
PSLDOL 10A (with adhesive)	10		

POLISHED BRASS thermo packed
bar length 0,90 lm - pack. 20 Pcs

Article	H mm		
PSLDOL 109AS (with adhesive)	10		

POLISHED BRASS thermo packed
bar length 0,90 lm - pack. 20 Pcs

Article	H mm		
PSLDOL 109	10		
PSLDOL 109A (with adhesive)	10		



ANODIZED SILVER ALUMINIUM thermo packed
bar length 2,70 lm - pack. 20 Pcs - 54 lm

Article	H mm		
PSLDAA 10	10		
PSLDAA 10A (with adhesive)	10		

COLOURS

