PROJOLLY is a rounded bead profile in natural, antique brass, polished varnished and chromed brass that can be applied on external corners of coverings. It can be used to close the perimeter of coverings and like (only natural and chromed version) a connection profile between step tread and riser of stairs coated with ceramic or natural stone tiles. Its particular section, the availability in three different finishes and special pieces such as internal and external corners, end caps and joints make PROJOLLY a much sought-after and elegant profile that allows a workmanlike application.

PROJOLLY

NATURAL, POLISHED VARNISHED, CHROMED AND ANTIQUE BRASS





NATURAL BRASS thermo packed bar length 2,7 lm - pack. 20 Pcs - 54 lm

Article	H mm		
PJON 08	8		*
PJON 10	10		
PJON 125	12,5		*

SUPER POLISHED VARNISHED CHROMED BRASS thermo packed bar length 2,7 lm - pack. 20 Pcs - 54 lm

				6.
	Article	H mm		Ì
	PJOC 06	6		¥
	PJOC 08	8		
	PJOC 10	10		
	PJOC 125	12,5		
C	OLOURS			






POLISHED VARNISHED BRASS thermo packed bar length 2,7 lm - pack. 20 Pcs - 54 lm

Article	H mm				
PJOL 06	6				4
PJOL 08	8				
PJOL 10	10				
PJOL 125	12,5				
Daliahad varnishad l	brace is not suitab	lo for froquent	nadact	rinn	


Polished varnished brass is not suitable for frequent pedestrian traffic places and/or scratching.

ANTIQUE BRASS thermo packed bar length 2,7 lm - pack. 20 Pcs - 54 lm

Article	H mm		
PJOB 08	8		k
PJOB 10	10		
PJOB 125	12,5		

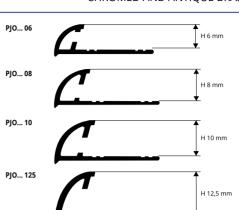

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

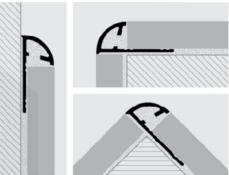

1. Choose "PROJOLLY" according to the tile thickness and desired finish. 2. Cut "PROJOLLY" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile. grout from the surface of the profile.

CAPSULES, END CAPS and THREE-WAYS JOINTS

VARNISHED POLISHED BRASS AND CHROMED BRASS EFFECT / PLASTIC

OC - Chromed brass

CAPS and JOINTS - CHROMED BRASS / PLASTIC

Article	H mm	Pack. 10 Pcs	Pack 2 Pcs
TPJOC 06-08-10-125/	6-8-10-12,5		
GIJA 06-08-10-125/	6-8-10-12,5		
Choose the desired pack	aging: E.g.:	(Pack. 10 Pc Pack. 2 Pcs)	s)





JOIN1 GIJA .../...

INTERNAL CAPSULES



EXTERNAL CAPSULES









LEFT CAPSULES - POLISHED VARNISHED BRASS

Article	H mm		Pack. 10 Pcs	Pack. 2 Pcs	
CPJOL 06/ (external)	6				•
IPJOL 06/ (internal)	6				ŀ
CPJOL 08/ (external)	8				
IPJOL 08/ (internal)	8				l
CPJOL 10/ (external)	10				
IPJOL 10/ (internal)	10				l
CPJOL 125/ (external)	12,5				
IPJOL 125/ (internal)	12,5				
Choose the desired package	ging·Fg·	CPIOI /	10 (Pack 10	Pcs)	

CPJOL .../2 (Pack. 2 Pcs)

LEFT CAPSULES - CHROMED BRASS

Article	H mm	Pack. 10 Pcs	Pack. 2 Pcs	
CPJOC 06/ (external)	6			+
IPJOC 06/ (internal)	6			4
CPJOC 08/ (external)	8			
IPJOC 08/ (internal)	8			
CPJOC 10/ (external)	10			
IPJOC 10/ (internal)	10			
CPJOC 125/ (external)	12,5			
IPJOC 125/ (internal)	12,5			

Choose the desired packaging: E.g.: CPJOC.../10 (Pack. 10 Pcs) CPJOC .../2 (Pack. 2 Pcs)

The right capsules are available on demand and must be used only in the following cases: A) when you are laying the cut base of the profile B) as an alternative to end-caps (right side). perpendicularly on the floor;



Add "D" to the article code. For example: CPJDOL 06.



Add "D" to the article code. For example: IPJDOL 06.



RIGHT CAPSULES Add "D" to the article code. For example: CPIDOC 06.



