



PROJOLLY

ANODIZED ALUMINIUM
SILVER, COPPER, TITANIUM, GOLD AND BLACK

PROJOLLY is a rounded bead profile in anodized aluminium that can be applied on external corners of coverings. It can be used to close the perimeter of coverings and like a connection profile between step tread and riser of stairs coated with ceramic or natural stone tiles. Its particular section and elegance, the availability in five different finishes and special pieces such as internal and external corners, end caps and joints make **PROJOLLY** a much sought-after and elegant profile that allows a workmanlike application.

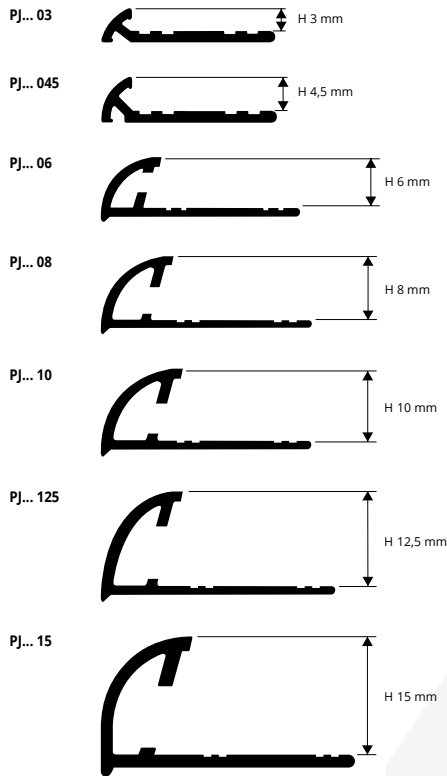

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

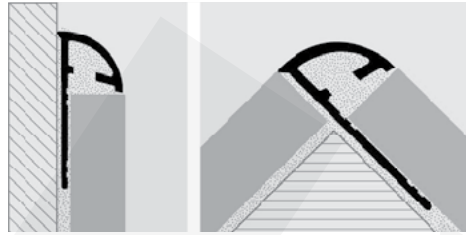

1. Choose "PROJOLLY" according to the tile thickness and desired finish. 2. Cut "PROJOLLY" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.



ANODIZED ALUM. (silver-copper-gold-titanium-black) thermo packed
bar length **2,7 lm** - pack. **40 Pcs - 108 lm**
(for **H 15** anodized silver alum. pack. **20 Pcs - 54 lm**)

Article	H mm		
PJAA 03 (anodized silver)	3		*
PJAO 03 (anodized gold)	3		*
PJAA 045 (anodized silver)	4,5		*
PJAO 045 (anodized gold)	4,5		*
PJAA 06 (anodized silver)	6		
PJAO 06 (anodized gold)	6		*
PJAA 08 (anodized silver)	8		
PJAR 08 (anodized copper)	8		
PJAT 08 (anodized titanium)	8		
PJAO 08 (anodized gold)	8		
PJNE 08 (anodized black)	8		
PJAA 10 (anodized silver)	10		
PJAR 10 (anodized copper)	10		
PJAT 10 (anodized titanium)	10		
PJAO 10 (anodized gold)	10		
PJNE 10 (anodized black)	10		
PJAA 125 (anodized silver)	12,5		
PJAR 125 (anodized copper)	12,5		*
PJAT 125 (anodized titanium)	12,5		
PJNE 125 (anodized black)	12,5		
PJAA 15 (anodized silver)	15		
PJAO 15 (anodized gold)	15		*

COLOURS

ANODIZED				
AA - Anodized silver alum.	AR - Anodized copper alum.	AT - Anodized titanium alum.	AO - Anodized gold alum.	NE - Anodized black alum.

CAPSULES, END CAPS and THREE-WAYS JOINTS

Anodized ALUMINIUM (silver, copper, titanium, gold and black) / PLASTIC

LEFT CAPSULES ANODIZED ALUMINIUM (silver, copper, titanium and gold)

Article	H mm		Pack. 10 pcs	Pack. 2 pcs
CPJAA 06/... (external)	6	4,91	49,10	10,80
IPJAA 06/... (internal)	6	4,91	49,10	10,80
CPJAO 06/... (external)	6	4,91	49,10	10,80
IPJAO 06/... (internal)	6	4,91	49,10	10,80
CPJAA/AO 08/... (external)	8	4,91	49,10	10,80
IPJAA/AO 08/... (internal)	8	4,91	49,10	10,80
CPJAR/AT 08/... (external)	8	5,08	50,80	11,64
IPJAR/AT 08/... (internal)	8	5,08	50,80	11,64
CPJAA/AO 10/... (external)	10	4,91	49,10	10,80
IPJAA/AO 10/... (internal)	10	4,91	49,10	10,80
CPJAR/AT 10/... (external)	10	5,08	50,80	11,64
IPJAR/AT 10/... (internal)	10	5,08	50,80	11,64
CPJAA 125/... (external)	12,5	4,91	49,10	10,80
IPJAA 125/... (internal)	12,5	4,91	49,10	10,80
CPJAT 125/... (external)	12,5	5,08	50,80	11,64
IPJAT 125/... (internal)	12,5	5,08	50,80	11,64
CPJAR 125/... (external)	12,5	5,08	50,80	11,64
IPJAR 125/... (internal)	12,5	5,08	50,80	11,64
CPJAA 15/... (external)	15	5,45	54,50	11,99
IPJAA 15/... (internal)	15	5,71	57,10	12,56
CPJAO 15/... (external)	15	5,45	54,50	11,99
IPJAO 15/... (internal)	15	5,71	57,10	12,56

Choose the desired packaging: E.g.:
CPJAA .../10 (Pack. 10 Pcs)
CPJAA .../2 (Pack. 2 Pcs)

LEFT CAPSULES ANODIZED ALUMINIUM (black)

Article	H mm		Pack. 10 pcs	Pack. 2 pcs
CPJNE 08/...	8			
IPJNE 08/...	8			
CPJNE 10/...	10			
IPJNE 10/...	10			
CPJNE 125/...	12,5			
IPJNE 125/...	12,5			

Choose the desired packaging: E.g.:
CPJNE .../10 (Pack. 10 Pcs)
CPJNE .../2 (Pack. 2 Pcs)

CAPS - ANODIZED ALUMINIUM (silver, copper, titanium, gold, black)

Article		Pack. 10 pcs	Pack. 2 pcs
TPJ... 06-08-10-125-15/...			

JOINTS - PLASTIC

Article		Pack. 10 pcs	Pack. 2 pcs
GIJA 06-08-10-125-15/...			

EXTERNAL CAPSULES




INTERNAL CAPSULES



The right capsules are available on demand and must be used only in the following cases:


A) when you are laying the cut base of the profile perpendicularly on the floor;

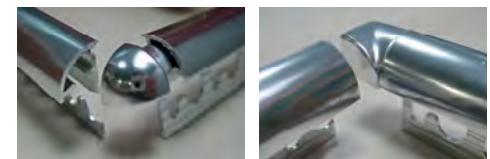

Add "D" to the article code. For example: CPJDAA 06.

Add "D" to the article code. For example: IPJDAA 06.

B) as an alternative to end-caps (right side).

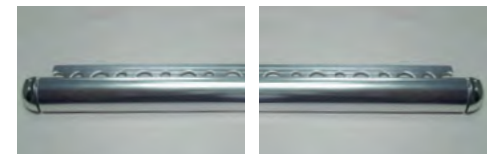


LEFT CAPSULES

RIGHT CAPSULES

Add "D" to the article code. For example: CPJDAA 06.

CAPS



TPJ... ..

JOINTS



GIJA

* = Production on demand with minimum quantity of 100 pcs. Production delay 4/5 weeks. Price to be agreed

PROJOLLY

PROJOLLY is a rounded bead profile in polished aluminium that can be applied on external corners of coverings. It can be used to close the perimeter of coverings and like a connection profile between step tread and riser of stairs coated with ceramic or natural stone tiles. Its particular section and elegance, the availability in five different finishes and special pieces such as internal and external corners, end caps and joints make **PROJOLLY** a much sought-after and elegant profile that allows a workmanlike application.


POLISHED ALUMINIUM
CHROME, COPPER, TITANIUM, GOLD AND BLACK



POLISHED ALUMINIUM (chrome-copper-titanium-gold-black)
thermo packed - bar length 2,7 lm - pack. 40 Pcs - 108 lm (H 15 mm - 54 lm)

Article	H mm		
PJBC 03 (polished chrome)	3		
PJBO 03 (polished gold)	3		*
PJBC 045 (polished chrome)	4,5		
PJBO 045 (polished gold)	4,5		
PJBC 06 (polished chrome)	6		
PJBO 06 (polished gold)	6		*
PJBR 08 (polished copper)	8		*
PJBT 08 (polished titanium)	8		
PJBO 08 (polished gold)	8		
PJBC 08 (polished chrome)	8		
PJBN 08 (polished black)	8		*
PJBR 10 (polished copper)	10		
PJBT 10 (polished titanium)	10		
PJBO 10 (polished gold)	10		
PJBC 10 (polished chrome)	10		
PJBN 10 (polished black)	10		*
PJBR 125 (polished copper)	12,5		*
PJBT 125 (polished titanium)	12,5		
PJBO 125 (polished gold)	12,5		
PJBC 125 (polished chrome)	12,5		
PJBN 125 (polished black)	12,5		
PJBC 15 (polished chrome)	15		

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

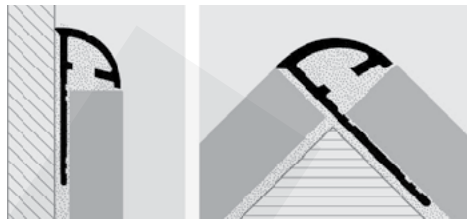

1. Choose "PROJOLLY" according to the tile thickness and desired finish. 2. Cut "PROJOLLY" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

COLOURS

POLISHED				
BC - Polished chrome alum.	BR - Polished copper alum.	BT - Polished titanium alum.	BO - Polished gold alum.	BN - Polished black alum.

PJ... 03		H 3 mm
PJ... 045		H 4,5 mm
PJ... 06		H 6 mm
PJ... 08		H 8 mm
PJ... 10		H 10 mm
PJ... 125		H 12,5 mm
PJBC 15		H 15 mm

CAPSULES, END CAPS and THREE-WAYS JOINTS

POLISHED ALUMINIUM (chrome, copper, titanium, gold, black) / PLASTIC

END CAPS - POLISHED ALUMINIUM chrome, copper, titanium, black

Article	Pack. 10 pcs	Pack. 2 pcs
TPJ... 06-08-10-125-15/...		


JOINTS - PLASTIC

Article	Pack. 10 pcs	Pack. 2 pcs
GIJA 06-08-10-125-15/...		

Choose the desired packaging: E.g.:

GIJA .../10 (Pack. 10 Pcs)
GIJA .../2 (Pack. 2 Pcs)

END CAP



TPJ... ..

JOINT



GIJA .../...

EXTERNAL CAPSULES



CPJ... ..



CPJD... ..

INTERNAL CAPSULES



IPJ... ..



IPJD... ..

LEFT CAPSULES POLISHED ALUMINIUM chrome, copper, titanium and gold

Article	H mm	Pack. 10 pcs	Pack. 2 pcs
CPJBO 06/... (external)	6		
IPJBO 06/... (internal)	6		
CPJBC 06/... (external)	6		
IPJBC 06/... (internal)	6		
CPJBC/BO 08/... (external)	8		
IPJBC/BO 08/... (internal)	8		
CPJBR 08/... (external)	8		
IPJBR 08/... (internal)	8		
CPJBT 08-10... (external)	8-10		
IPJBT 08-10... (internal)	8-10		
CPJBC/BO 10/... (external)	10		
IPJBC/BO 10/... (internal)	10		
CPJBR 10/... (external)	10		
IPJBR 10/... (internal)	10		
CPJBO 125/... (external) (*)	12,5		
IPJBO 125/... (internal)	12,5		
CPJBC 125/... (external) (*)	12,5		
IPJBC 125/... (internal)	12,5		
CPJBR 125/... (external) (*)	12,5		
IPJBR 125/... (internal)	12,5		
CPJBT 125/... (external) (*)	12,5		
IPJBT 125/... (internal)	12,5		
CPJBC 15/... (external) (*)	15		
IPJBC 15/... (internal)	15		

Choose the desired packaging: E.g.: CPJBC .../10 (Pack. 10 Pcs)
CPJBC .../2 (Pack. 2 Pcs)

(*) NOT SUITABLE FOR THREE-WAYS CORNER

LEFT CAPSULES POLISHED ALUMINIUM black

Article	H mm	Pack. 10 pcs	Pack. 2 pcs
CPJBN 08/...	8		
IPJBN 08/...	8		
CPJBN 10/...	10		
IPJBN 10/...	10		
CPJBN 125/...	12,5		
IPJBN 125/...	12,5		


The right capsules are available on demand and must be used only in the following cases:
A) when you are laying the cut base of the profile perpendicularly on the floor;



Add "D" to the article code.
For example: CPJDBC 06.

Add "D" to the article code.
For example: IPJDBC 06.

B) as an alternative to end-caps (right side).

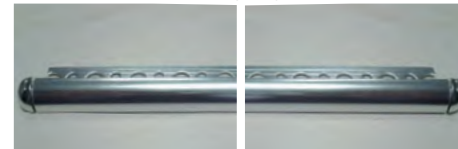

LEFT CAPSULES
Add "D" to the article code. For example: CPJDBC 06.

* = Production on demand with minimum quantity of 100 pcs. Production delay 4/5 weeks. Price to be agreed

PROJOLLY is a rounded bead profile in varnished aluminium that can be applied on external corners of coverings. It can be used to close the perimeter of coverings. Its particular section and elegance, the availability in five different colours and special pieces such as internal and external corners, end caps and joints make **PROJOLLY** a much sought-after and elegant profile that allows a workmanlike application.



VARNISHED ALUMINIUM (HOT-WORKED 200°) thermo packed bar length **2,7 lm** - pack. **20 Pcs-54 lm** (colour white **40 Pcs - 108 lm**)

Article	H mm		
PJA 06-01 (white)	6		
PJA 08-...	8		
PJA 10-...	10		
PJA 125-01 (white)	12,5		

With H 8 and 10 mm available in the colours: 01 - 0106 - 0311 - 06 - 11
Available on demand: 02-03-0211-10-17.
The code of the selected colour must be added to the article code.
E.g.: PJA 08... (chosen colour white) PJA 08-01.

COLOURS


01 - Varnished white alum. (9016)	0106 - Varnished white Ivory alum. (9001)	0311 - Varnished sphalt grey alum. (7043)
06 - Varnished ivory alum. (1015)	11 - Varnished black alum. (9005)	




On demand may be realised in other finishes of the colour chart. Contact our customer service for minimal quantity, timing and price.

AVAILABLE MINIMUM QUANTITY 100 PCS by colour and height
(Price to be agreed. Production delay 4/5 weeks)

02 - Varnished light grey alum. (7035)	03 - Varnished stone grey alum. (7030)	0211 - Varnished quartz grey alum. (7039)
10 - Varnished klinker red alum. (8004)	17 - Varnished bahama beige alum.	

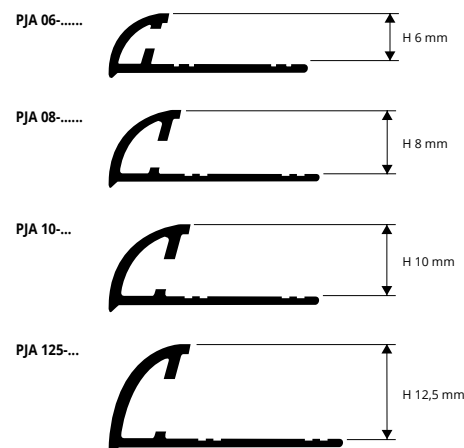

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

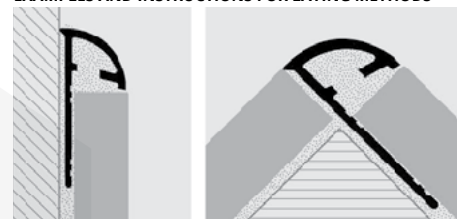

1. Choose "PROJOLLY" according to the tile thickness and desired colour. 2. Cut "PROJOLLY" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

CAPSULES, END CAPS and THREE-WAYS JOINTS

VARNISHED ALUMINIUM / PLASTIC

LEFT CAPSULES VARNISHED ALUMINIUM (HOT-WORKED 200°)

Article	H mm	Pack. 10 pcs	Pack. 2 pcs
CPJA 06-01/... (external)	6		
IPJA 06-01/... (internal)	6		
CPJA 08-.../... (external)	8		
IPJA 08-.../... (internal)	8		
CPJA 10-.../... (external)	10		
IPJA 10-.../... (internal)	10		
CPJA 125-01/... (external)	12,5		
IPJA 125-01/... (internal)	12,5		

With H 8 and 10 mm available in the colours: 01 - 0106 - 0311 - 06 - 11
Available on demand: 02-03-0211-10-17.
The code of the selected colour must be added to the article code.
E.g.: CPJA 08-.../... (chosen colour white) CPJA 08-01/10.

EXTERNAL CAPSULES



CPJA... /.../...

CPJDA... /.../...

INTERNAL CAPSULES



IPJA... /.../...

IPJDA... /.../...

END CAPS - VARNISHED ALUMINIUM (HOT-WORKED 200°)


Article	H mm	Pack. 10 pcs	Pack. 2 pcs
TPJA... 06/...	6		
TPJA... 08/...	8		
TPJA... 10/...	10		
TPJA... 125/...	12,5		

JOINTS - PLASTIC

Article	H mm	Pack. 10 pcs	Pack. 2 pcs
GIJA 06/...	6		
GIJA 08/...	8		
GIJA 10/...	10		
GIJA 125/...	12,5		

Choose the desired packaging: E.g.: GIJA .../10 (Pack. 10 Pcs)
GIJA .../2 (Pack. 2 Pcs)

END CAP



TPJA... /.../...

JOINT



GIJA .../.../...


The right capsules are available on demand and must be used only in the following cases:

A) when you are laying the cut base of the profile perpendicularly on the floor;



Add "D" to the article code. For example: CPJDA 06-01. Add "D" to the article code. For example: IPJDA 06-01.

B) as an alternative to end-caps (right side).

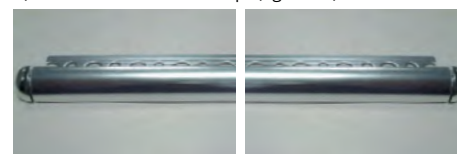

LEFT CAPSULES

RIGHT CAPSULES

Add "D" to the article code. For example: CPJDA 06-01.