

**PROJOLLY** is a rounded bead profile in varnished aluminium that can be applied on external corners of coverings. It can be used to close the perimeter of coverings. Its particular section and elegance, the availability in five different colours and special pieces such as internal and external corners, end caps and joints make **PROJOLLY** a much sought-after and elegant profile that allows a workmanlike application.



VARNISHED ALUMINIUM (HOT-WORKED 200°) thermo packed bar length 2,7 lm - pack. 20 Pcs-54 lm (colour white 40 Pcs - 108 lm)

Article	H mm
PJA 06-01 (white)	6
PJA 08-...	8
PJA 10-...	10
PJA 125-01 (white)	12,5

With H 8 and 10 mm available in the colours: 01 - 0106 - 0311 - 06 - 11  
Available on demand: 02-03-0211-10-17.  
The code of the selected colour must be added to the article code.  
E.g.: PJA 08... (chosen colour white) PJA 08-01.


COLOURS

01 - Varnished white alum. (9016)	0106 - Varnished white ivory alum. (9001)	0311 - Varnished sphalt grey alum. (7043)
06 - Varnished ivory alum. (1015)	11 - Varnished black alum. (9005)	


On demand may be realised in other finishes of the colour chart. Contact our customer service for minimal quantity, timing and price.

AVAILABLE MINIMUM QUANTITY 100 PCS by colour and height (Price to be agreed. Production delay 4/5 weeks)

02 - Varnished light grey alum. (7035)	03 - Varnished stone grey alum. (7030)	0211 - Varnished quartz grey alum. (7039)
10 - Varnished klinker red alum. (8004)	17 - Varnished bahama beige alum.	

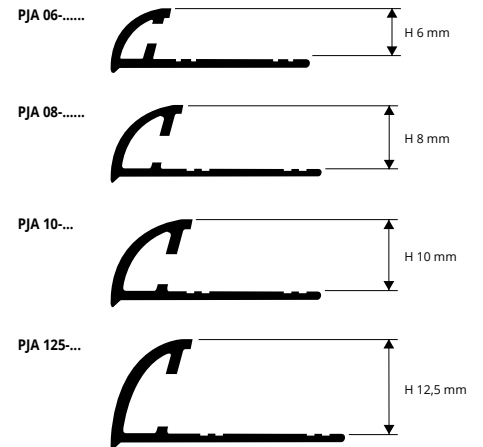

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

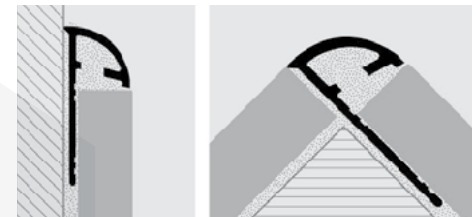

1. Choose "PROJOLLY" according to the tile thickness and desired colour.
2. Cut "PROJOLLY" to the desired length and apply the adhesive on the support where the profile will be laid.
3. Press the anchoring flange of "PROJOLLY" into the adhesive.
4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile.
5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

CAPSULES, END CAPS and THREE-WAYS JOINTS

VARNISHED ALUMINIUM / PLASTIC

LEFT CAPSULES VARNISHED ALUMINIUM (HOT-WORKED 200°)

Article	H mm	Pack. 10 pcs	Pack. 2 pcs
CPJA 06-01/... (external)	6		
IPJA 06-01/... (internal)	6		
CPJA 08-.../... (external)	8		
IPJA 08-.../... (internal)	8		
CPJA 10-.../... (external)	10		
IPJA 10-.../... (internal)	10		
CPJA 125-01/... (external)	12,5		
IPJA 125-01/... (internal)	12,5		

With H 8 and 10 mm available in the colours: 01 - 0106 - 0311 - 06 - 11  
Available on demand: 02-03-0211-10-17.  
The code of the selected colour must be added to the article code.  
E.g.: CPJA 08-.../... (chosen colour white) CPJA 08-01/10.

EXTERNAL CAPSULES



INTERNAL CAPSULES



END CAPS - VARNISHED ALUMINIUM (HOT-WORKED 200°)


Article	H mm	Pack. 10 pcs	Pack. 2 pcs
TPJA... 06/...	6		
TPJA... 08/...	8		
TPJA... 10/...	10		
TPJA... 125/...	12,5		

JOINTS - PLASTIC

Article	H mm	Pack. 10 pcs	Pack. 2 pcs
GJJA 06/...	6		
GJJA 08/...	8		
GJJA 10/...	10		
GJJA 125/...	12,5		

Choose the desired packaging: E.g.: GJJA .../10 (Pack. 10 Pcs)  
GJJA .../2 (Pack. 2 Pcs)

END CAP



TPJA... /...

JOINT



GJJA .../...


The right capsules are available on demand and must be used only in the following cases:

A) when you are laying the cut base of the profile perpendicularly on the floor;



Add "D" to the article code. For example: CPJDA 06-01. Add "D" to the article code. For example: IPJDA 06-01.

B) as an alternative to end-caps (right side).

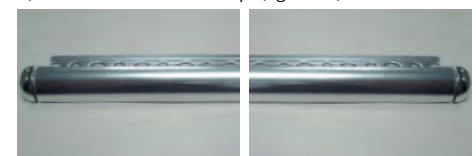

LEFT CAPSULES

RIGHT CAPSULES

Add "D" to the article code. For example: CPJDA 06-01.