### WWW.CONSTRECO.PT

**PROJOLLY SQUARE** is a square corner bead profile in squares and leather effect stainless steel AISI 304/1.4301-V2A that can be applied on external corners of coverings. It can be used to close the perimeter of coverings, like a connection profile between step tread and riser of stairs coated with ceramic and natural stone tiles, and also as separation profile for floor and wall coverings. Its particular section, the availability in two different finishes and special pieces such as internal and external corners, end caps and joints make **PROJOLLY SQUARE** a much sought-after profile that allows a workmanlike application even in environments subject to high mechanical stresses.

# PROJOLLY

SQUARES AND LEATHER EFFECT STAINLESS STEEL AISI 304/1.4301-V2A



STAINLESS STEEL AISI 304/1.4301-V2A SQUARES bar length 2,7 lm - pack. 20 Pcs - 54 lm - 8/10 mm

Article	H mm		
PJQACQ 08	8		,
PJQACQ 10	10		,
PJQACQ 11	11		4
PJQACQ 125	12,5		4

JOINTS - PLASTIC

GIIO 08-10-11-125/	8-10-11-12 5		
Article	LI mama		

Choose the desired packaging: E.g.: GIJQ .../10 (Pack. 10 Pcs)



STAINLESS STEEL AISI 304/1.4301-V2A LEATHER EFFECT bar length 2,7 lm - pack. 20 Pcs - 54 lm - 8/10 mm

Article	H mm	
PJQACC 08	8	•
PJQACC 10	10	
PJQACC 11	11	
PJQACC 125	12,5	

#### COLOURS



#### INSTRUCTIONS FOR LAYING

PIOAC... 08

PIOAC... 11

PJQAC... 125

Choose "PROJOLLY SQUARE" according to the tile thickness and desired finish. 2. Cut "PROJOLLY SQUARE" to the desired length and apply the adhesive on the support where the profile will be laid.
Press the anchoring flarge of "PROJOLLY SQUARE" into the adhesive.
4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

### SUITABLE FOR USE IN CONTACT WITH FOODSTUFFS.

PROJOLLY SQUARE is a square corner bead profile in polished stainless steel AISI 304/1.4301-V2A that can be applied on external corners of coverings. It can be used to close the perimeter of coverings, like a connection profile between step tread and riser of stairs coated with ceramic and natural stone tiles, and also as separation profile for floor and wall coverings. Its particular section and the availability of special pieces such as internal and external corners, end caps and joints make PROJOLLY SQUARE a much sought-after profile that allows a workmanlike application even in environments subject to high mechanical stresses.

## PROJOLLY SQUARE

12,5 mm

POLISHED STAINLESS STEEL AISI 316L/1.4404-V4A




POLISHED STAINLESS STEEL AISI 316L/1.4404-V4A with protective film bar length 2,7 LM - pack. 20 Pcs - 54 lm - 8/10 mm

Article	H mm	
PJQACM 08	8	
PJQACM 10	10	
PJQACM 11	11	
PJQACM 125	12,5	
COLOURS		



SUITABLE FOR USE IN CONTACT WITH FOODSTUFFS.

1. Choose "PROJOLLY SQUARE" according to the tile thickness and desired finish. 2. Cut "PROJOLLY SQUARE" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY SQUARE" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

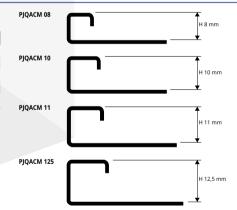

# CAPSULES, END CAPS and THREE-WAYS JOINTS

STAINLESS STEEL AISI 316L

CAPSULES and END CAPS - POLISHED STAINLESS STEEL AISI 316L/1.4404

Article	H mm				
CPJQACM 08/	8				
CPJQACM 10/	10				
CPJQACM 11/	11				
CPJQACM 125/	12,5				
TPJQACM 08-10-11-125/	8-10-11-12,5				

Choose the desired packaging: E.g.: CPJQACM .../10 (Pack. 10 Pcs) CPIOACM .../2 (Pack. 2 Pcs)

IOINTS - PLASTIC

,				
Article	H mm			
GIJQ 08/	8			
GIJQ 10/	10			
GIJQ 11/	11			
GIJQ 125/	12,5			

Choose the desired packaging: E.g.: GIJQ .../10 (Pack. 10 Pcs) GIJQ .../2 (Pack. 2 Pcs)



CPJQACM 045-06-08-10-125/...



JOINT



END CAP

