

PROJOLLY is a rounded bead profile in natural, polished varnished and chromed brass that can be applied on external corners of coverings. It can be used to close the perimeter of coverings and like (only natural and chromed version) a connection profile between step tread and riser of stairs coated with ceramic or natural stone tiles. Its particular section, the availability in three different finishes and special pieces such as internal and external corners, end caps and joints make **PROJOLLY** a much sought-after and elegant profile that allows a workmanlike application.

PROJOLLY

NATURAL, POLISHED VARNISHED AND CHROMED BRASS



NATURAL BRASS thermo packed
bar length 2,7 lm - pack. 20 Pcs - 54 lm

Article	H mm			
PJON 08	8			
PJON 10	10			
PJON 125	12,5			

POLISHED VARNISHED BRASS thermo packed
bar length 2,7 lm - pack. 20 Pcs - 54 lm

Article	H mm			
PJOL 06	6			
PJOL 08	8			
PJOL 10	10			
PJOL 125	12,5			

Polished varnished brass is not suitable for frequent pedestrian traffic places and/or scratching.


SUPER POLISHED VARNISHED CHROMED BRASS
thermo packed bar length 2,7 lm - pack. 20 Pcs - 54 lm

Article	H mm			
PJOC 06	6			
PJOC 08	8			
PJOC 10	10			
PJOC 125	12,5			


MIRROR LINE

COLOURS

ON - Natural brass	OL - Polished varnished brass	OC - Chromed brass

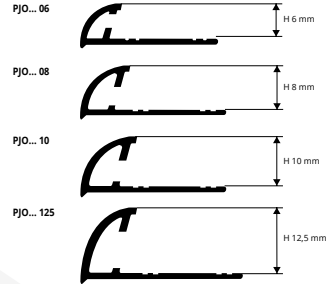

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

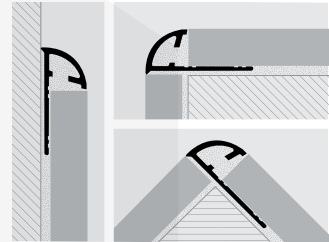

1. Choose "PROJOLLY" according to the tile thickness and desired finish. 2. Cut "PROJOLLY" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

CAPSULES, END CAPS and THREE-WAYS JOINTS

VARNISHED POLISHED BRASS AND CHROMED BRASS EFFECT / PLASTIC

CAPS and JOINTS - CHROMED BRASS / PLASTIC

Article	H mm			
TPJOC 06-08-10-125/... 6-8-10-125				
GIJA 06-08-10-125/... 6-8-10-125				

Choose the desired packaging: E.g.: GIJA.../10 (Pack. 10 Pcs)
GIJA.../2 (Pack. 2 Pcs)

END CAP




TPJOC 06-08-10-125/...

JOINT



GIJA 06-08-10-125/...

EXTERNAL CAPSULES



CPIJOL 06-08-10-125/... CPIJDOL 06-08-10-125/... IPJDOL 06-08-10-125/... IPJOL 06-08-10-125/...



CPIJOC 06-08-10-125/... CPIJDOC 06-08-10-125/... IPJDOC 06-08-10-125/... IPJOC 06-08-10-125/...

LEFT CAPSULES - POLISHED VARNISHED BRASS

Article	H mm			
CPJOL 06/... (external)	6			
IPJOL 06/... (internal)	6			
CPJOL 08/... (external)	8			
IPJOL 08/... (internal)	8			
CPJOL 10/... (external)	10			
IPJOL 10/... (internal)	10			
CPJOL 125/... (external)	12,5			
IPJOL 125/... (internal)	12,5			

Choose the desired packaging: E.g.: CPJOL.../10 (Pack. 10 Pcs)
CPJOL.../2 (Pack. 2 Pcs)

LEFT CAPSULES - CHROMED BRASS

Article	H mm			
CPJOC 06/... (external)	6			
IPJOC 06/... (internal)	6			
CPJOC 08/... (external)	8			
IPJOC 08/... (internal)	8			
CPJOC 10/... (external)	10			
IPJOC 10/... (internal)	10			
CPJOC 125/... (external)	12,5			
IPJOC 125/... (internal)	12,5			

Choose the desired packaging: E.g.: CPJOC.../10 (Pack. 10 Pcs)
CPJOC.../2 (Pack. 2 Pcs)


The right capsules are available on demand and must be used only in the following cases:

A) when you are laying the profile perpendicularly on the floor;



Add "D" to the article code.
For example: CPIJDOL 06.

B) as an alternative to end-caps (right side).



LEFT CAPSULES

Add "D" to the article code. For example: CPIJDOC 06.

RIGHT CAPSULES

Add "D" to the article code. For example: CPIJDOC 06.

* = On demand, price and delivery time to be agreed.